

TOP AND CABINET PARTS

For Models: LSQ9010KQ0, LSQ9010KT0 (Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
		Installation
		Instructions
	LIT3952817	English
	LIT3951578	French
		Use & Care Guide
	LIT3955155	English
	LIT3954821	French
	LIT3954539	Energy Guide
	LIT3955499	Wiring Diagram


Following May Be Purchased

DO-IT-YOURSELF REPAIR MANUALS

LIT4313896 Manual, Washer Do-It-Yourself 2 Top 8271378 White 8271380 Biscuit 62750 Spacer, Cabinet To 3 Top (4) 357213 Nut, Push-In (2) 4 5 Cabinet 63424 White 3954357 Biscuit 62780 Clip, Top & Cabinet 6 & Rear Panel (2) 3976348 Cabinet -7 Sound Damper 3356311 Screw & Washer, 8 Lid Switch (2) 9 3357011 Screw, 10-16 x 1/2 11 3949237 Switch, Lid 13 3351355 Screw, Lid Hinge Mounting (4) 15 54584 Hinge, Lid (L.H.) 91770 Hinge, Lid (R.H.) 16 19119 Bumper, Lid Hinge 17 21258 Bearing, Lid 18 Hinge (2) 19 Lid 3954489 White 3954491 Biscuit 20 358684 Strike, Lid Switch 9724509 Bumper, Lid (2) 22 3390631 Screw, 28 10-16 x 3/8 (5) 90016 Clip, Harness 31 32 3362952 Dispenser, Bleach

CONTROLS AND REAR PANEL PARTS

For Models: LSQ9010KQ0, LSQ9010KT0 (Designer White) (Biscuit)

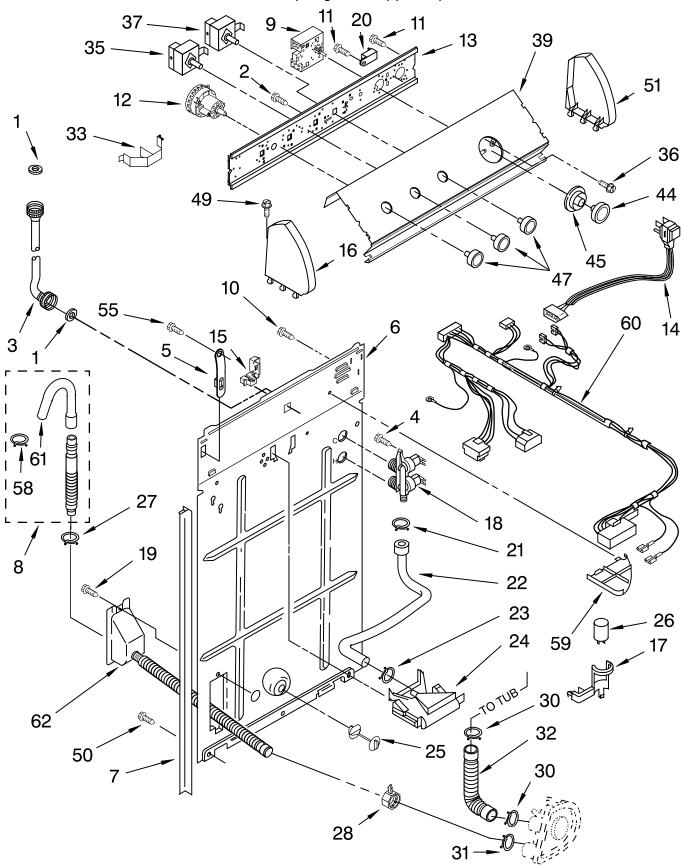


CONTROLS AND REAR PANEL PARTS

For Models: LSQ9010KQ0, LSQ9010KT0 (Designer White) (Biscuit)

Illus.	Part		l Illus.	Part		lllus.	Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
1	3976300	Washer, Water	15	3952821	Strain Relief,	37	8528333	Switch, Rotary
•	007 0000	Inlet Hose (4)		0002021	Power Cord	39	0020000	Panel, Console
		$(1-1/16 \times 5/8)$	16		Cap, End (L.H.)		3955367	
2 3	3400073	Screw, Ground		8271365			3955368	
3		Hose, Water		8271368		44		Knob, Timer
		Inlet (2)	17		Clip, Capacitor		8271345	
		Blue Coupler	18	3952164	Valve, Water		8271347	
		Red Coupler	40	00004	Mixing	45		Dial, Timer
4	9740848		19	90864	Screw,		8271351	
5		Strap, Console (2)	20	604440	10–24 x 1/2	47	8271370	
6		Panel, Rear	20		Mini-Buzzer	47	0074000	Knob, Control
7		Pad, Rear Panel	21 22	370431	Clamp, Hose		8271339 8271348	
8	395 1609	Hose, Drain	22	3337320	Hose, Vacuum Break	49		
	661577	(4 ft.) Hose, Drain	23	371503	Clamp, Hose	49	300320	Screw, 8–18 x 1.25 (Panel to Top)
	001377	(9 ft.)	24		Break, Vacuum	50	62863	Screw, 10–16 x 3/8
		(Not Included)	25		Support, Rear	51	02003	Cap, End (R.H.)
	3357090	Extension	20	0010200	Panel	"	8271359	
	0007000	Drain Hose	26	661606	Capacitor,		8271362	
		(21 Inches)		00.000	Motor Start	55	3390647	
		(Not Included.)	27	3366912	Clamp, Hose			8–18 x 1/2
9	3951702		28		Clamp, Hose	58	3366913	
		(60 Hz.)	30		Clamp, Hose			Hose
		(Motor Not A	31		Clamp, Hose	59	3348424	Shield, Suds
		Service Part)	32	3951449	Hose, Pump To Tub	60	3955492	Harness, Wiring
10	3351614	Screw			(Includes #30)			(For Detail See
11	90767	Screw 8A x 3/8	33	8055003	Clip, Harness			Pages 9 & 10)
12		Switch, Water Level			& Pressure Hose	61	3357027	
13		Bracket, Control	35	661614	Switch, Water			Hose
14	3948063	Cord, Power			Temperature	62	8317940	Drain Hose
			36	3400818	Screw, Timer			Assembly
					Mounting			

AGITATOR, BASKET AND TUB PARTS

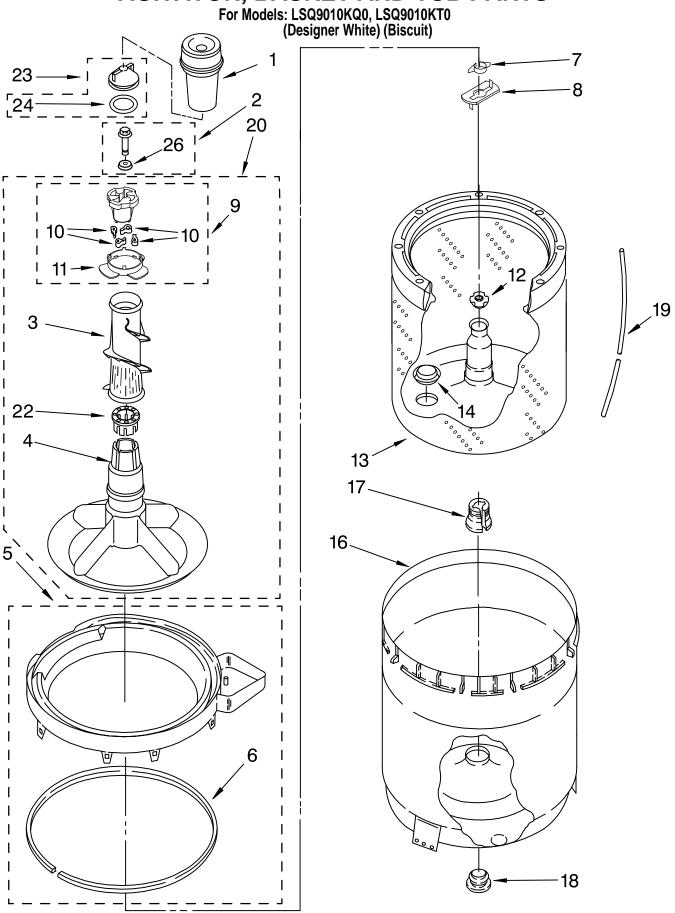


AGITATOR, BASKET AND TUB PARTS For Models: LSQ9010KQ0, LSQ9010KT0 (Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1 2	63580 358237	Dispenser Screw & Washer (5/16–24 x 1)
3 4 5 6	3363003 3951632 63851 3359585	Clothes Mover Agitator Tub Ring & Gasket Gasket, Tub Ring
7 8 9 10	3354845 3355921 3951682 3366877	Washer, Agitator
11	3952374	
12 13	21366 3951989	Nut, Spanner Basket & Balance Ring
14 16 17	8522271 63849 389140	Tub
18 19	383727 3347780	
20	3951744	Agitator (Complete)
22 23 24 26	3951608 3354733 3348855 3949550	Spacer, Thrust Cap, Barrier Seal, Inner Cap Washer

MACHINE BASE PARTS

For Models: LSQ9010KQ0, LSQ9010KT0 (Designer White) (Biscuit)

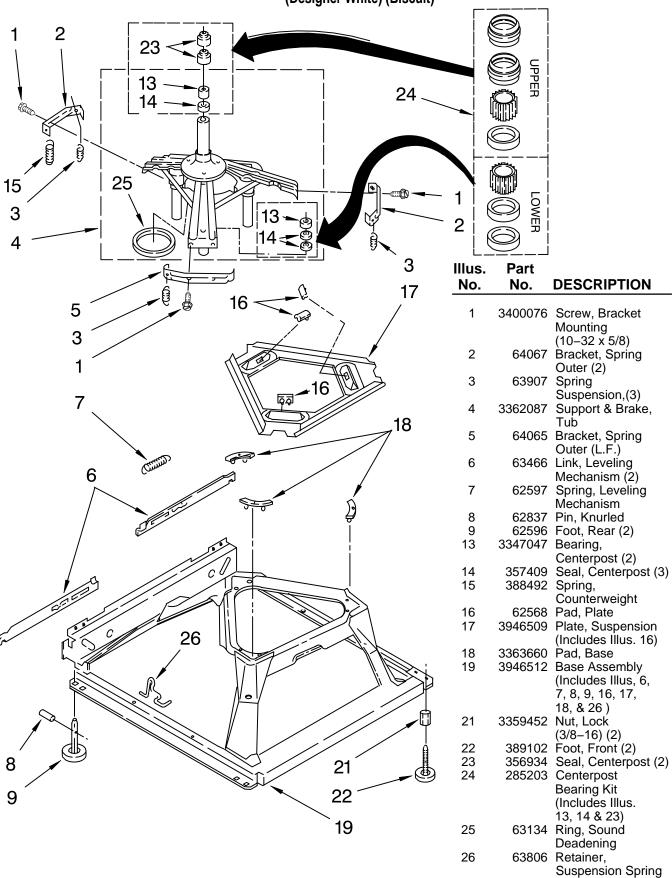


BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS For Models: LSQ9010KQ0, LSQ9010KT0 (Designer White) (Biscuit)

		(Desig	iner white) (biscuit)			
6	Illus.	Part		Illus.	Part	
	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
	110.	110.	DEGOINI HON	110.	110.	DECORN HOR
	1	388952	Brake & Drive	11	62611	Plate, Motor
			Tube (Complete)			Mount To
			(Refer to Page 11			Gearcase
			For Further	12	62691	Grommet, Motor (4)
	•	00000	Breakdown)	13	285753	Coupling, Motor
	2	63292	Washer, Spin	15	2255454	& Isolation
2	3	62607	Tube Thrust Ring, Spin	15	3355454	Ciiρ, Anti–Rattle
	3	02097	Tube Support	16	3400516	
3	4	63283	Ring, Retainer	17		Retainer, Motor (2)
	5		Clutch (Complete)	18		Shield, Tub
4_	6	3951308	Band & Lining,			To Motor
			Clutch (Includes	19	8528157	Motor, Main
5.			Illus. 7 & 8)			Drive
r [-	7	62646	Cap, Clutch	20	3952056	Switch, Main
	_	0040700	Spring (2)			Drive Motor
	8	3946792	Spring, Clutch	21		Retainer, Pump (2)
	9	3360630	Gearcase (Complete)	22 23	3303394	Pump (Complete) Screw, 10–16 x 5/8
			(Complete) (Refer To Page 12	23		Shield, Motor
16 8!			For Further	24	3340332	Siliela, Motor
15			Breakdown)			
L	10	3357334	Screw, Gearcase	ı		
			To Base (3)			
			. ,			
μμ						
				/		
				7		
			/ 0			
				/		
9	M	1				18
	9	1	` \			
10	all ` > .	.		6	2	3 19
			40		(
	// \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	6	— 16 S			
	@ < \	(Q) \	17 ———	_ >		
\			>	9	. ^ 🔪 🚜	
1	<i>f</i>	`_\@		1	20`	
11/	/	/	` `	,		` \
10				\sim \Box	D 1	
12					(Po 65)	>
13		Σ,	/		11/19	
24		\sim		(7,20)		
27	Г		` 	Y RA	<u>`</u> \.\!	K.
			- / (8)	1 200	\times	21
			1/2	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	`, `\	_22
			`	~]	7 3	
			<	, i	(
				\ \$\$	\	
				ļ	```	
			17	Ţ		To the second
			00	- ∄		→
			23	_		

WIRING HARNESS PARTS

For Models: LSQ9010KQ0, LSQ9010KT0 (Designer White) (Biscuit)

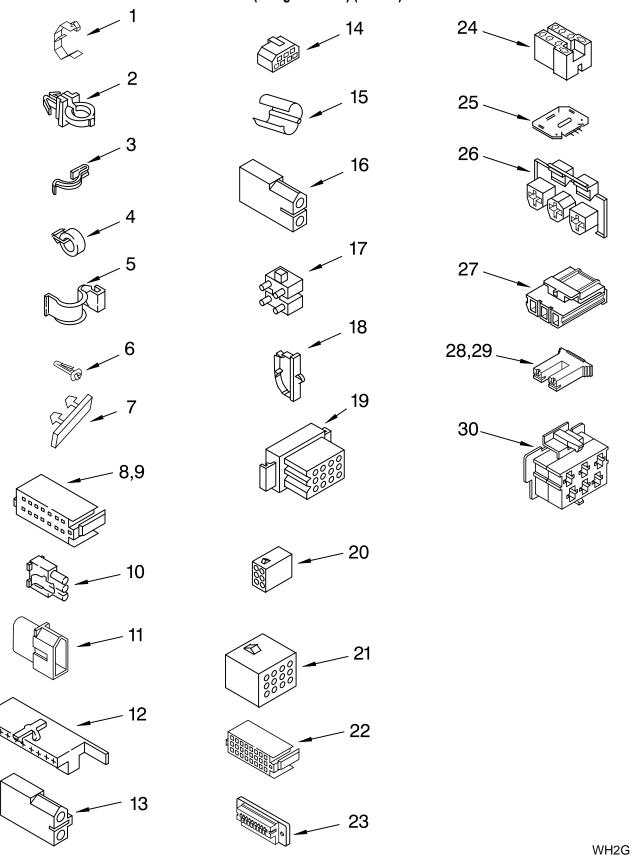

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Models: LSQ9010KQ0, LSQ9010KT0 (Designer White) (Biscuit)


Illus.	Part		Illus.	Part		Illus.	Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
1 2 3 4	388498 3347812	Clip, Harness Clip, Harness Clip, Harness Clip, Harness	13	3348075	Block, Disconnect (Motor 3 Speed) (Use Term. 94613 Or 94614.)	23 24 25	60687	Connector, Etc Connector, Relay (Use Term.308569) E.T.C. Control
5		Clip, Harness	14	3347243	Block, Disconnect	26	3948617	Connector (T.P.A.)
6 7	389379	(Suds Models)	15 16		(Use Term. 352088) Protector Connector			(3-Circuit) (Lid Switch) (Use Term. 3948619
8	352090	Timer, Block Disconnect (White)	17	387566	(2-Way) (Use Term.94614) Plug, Terminal	27	3360056	OR 3948620.) Connector (T.P.A) (3–Circuit)
9	352089	Timer, Block Disconnect (Black)			(4-Way) (Power Cord) (Use M3 Screws)			(Pressure Switch) (Use Term.3948619 OR 3948620.)
10	62889	Receptacle, Terminal (3–Way) (Lid Switch) (Use Term.94613)	18 19	3390423	Clip, Harness Block, Disconnect (12–Way) (Timer) (Use Term. 94613)	28 29	3354925 3354926	Block, Connector (Cold Valve) (Use Term.693217) Block, Connector (Hot Valve)
11	353424	Or 94614.) Plug, Terminal (3–Way) (Power Cord) (Use Term.94613)	20	3347730 388818	Receptacle (6–Way) (Use Term. 94613) Plug, Terminal (12–Way)	30	3948615	(Use Term.693217) Connector (T.P.A.) (6-Circuit) (Temp. Switch) (Use Term.3948619
12	62505	Block, Disconnect (Motor 2 Speed) (Use Term.352088)	22	3369366	(Use Term. 94613 Or 94614.) Timer, Block Disconnect (Black) (Amp) (Use Term.3369365)			OR 3948620.)

FOR COMPLETE WIRING HARNESS REFER TO **CONTROL AND REAR PANEL PARTS PAGE**

WH2G

BRAKE AND DRIVE TUBE PARTS

For Models: LSQ9010KQ0, LSQ9010KT0 (Designer White) (Biscuit)

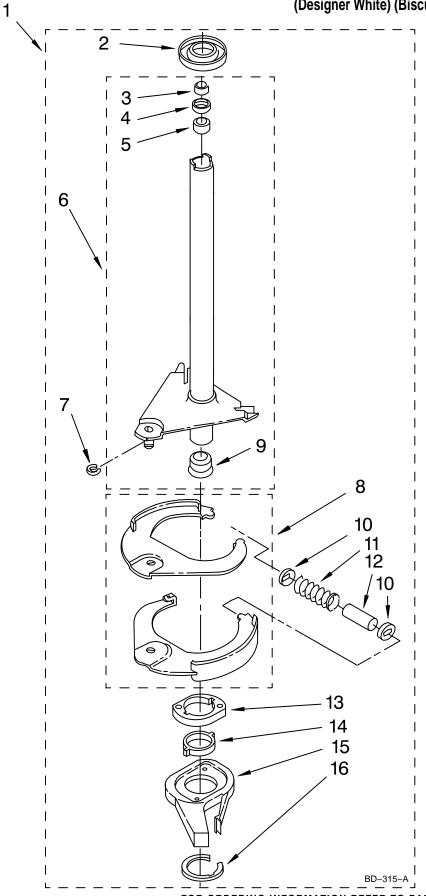


Illus. No.	Part No.	DESCRIPTION				
1	388952	Brake And Drive				
2 3 4 5	62658 91939 356427 356937	Tube (Complete) Ring, Thrust Seal, Oil Seal, Drive Tube Spacer, Drive				
6	64027	Tube Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)				
7 8 9	64035 64232 62703	Ring, Retaining Shoe, Brake "T" Bearing,				
10	62648	Spin Tube Cap, Brake Spring (2)				
11 12	387806 62909	Spring (2) Spring, Brake Sleeve, Brake Spring				
13	63023	Cam, Brake Release				
14 15	63022 64194	Sleeve, Cam Driver, Brake				
16	90368	Cam Ring, Retaining				
FOLLOWING PARTS NOT ILLUSTRATED						

285208 Lubricant (Use Only In Brake Shoe Assembly On Roller & Pin)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST 11


GEARCASE PARTS


For Models: LSQ9010KQ0, LSQ9010KT0 (Designer White) (Biscuit)

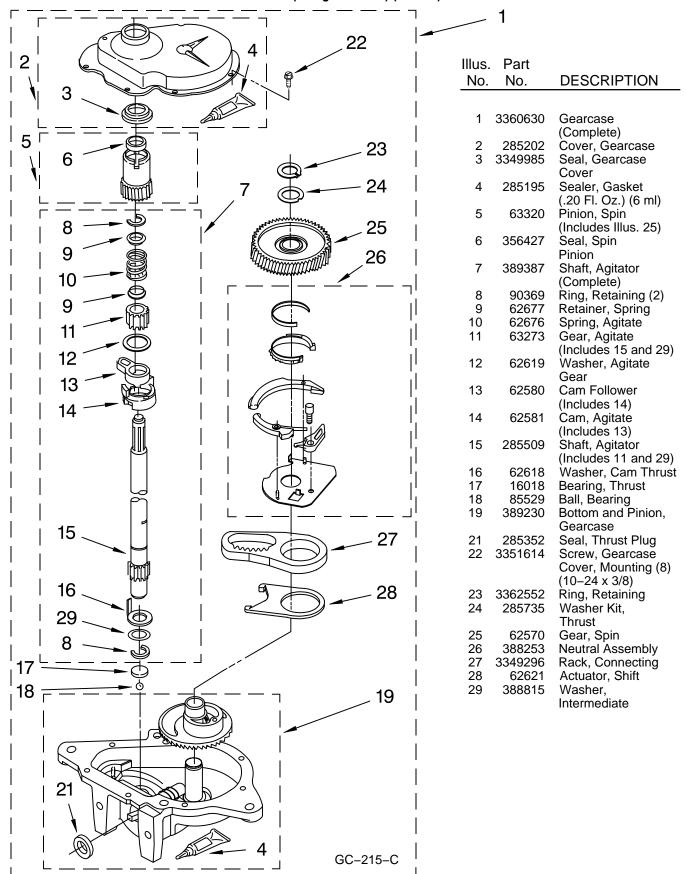

WATER SYSTEM PARTS

For Models: LSQ9010KQ0, LSQ9010KT0 (Designer White) (Biscuit)

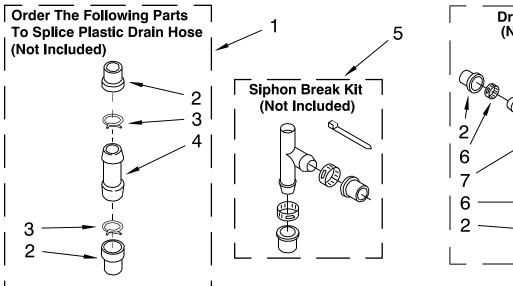

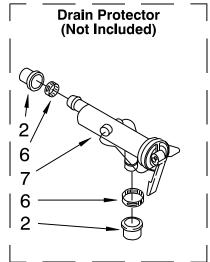


WS400

Illus. No.	Part No.	DESCRIPTION
1	285442	Connector Kit, Plastic Drain Hose
2	285321	Sleeve Kit, (Contains 2 Sleeves)
3	370447	Clamp, Hose
4	16272	Connector, Straight
5	285320	Siphon Break Kit
6 7	65349 367031	(Not Included) Clamp, Hose Drain Protector (Not Included)

MISCELLANEOUS PARTS

For Models: LSQ9010KQ0, LSQ9010KT0 (Designer White) (Biscuit)

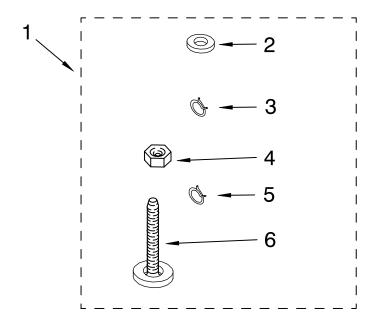

799344 White (Uncut) 4392900 Biscuit (Uncut)

IIIus. No.	Part No.	DESCRIPTION
1	3976263	Miscellaneous
		Parts Bag
2	3976300	Washer, Inlet
		Hose
		(1-1/16 x 5/8) (4)
3	3366912	Clamp, Hose
4	3359452	Nut, Lock
		(3/8–16)
5	3366913	Clamp, Hose
6		Foot, Front (2)
		, , ,

OPTIONAL PARTS (NOT INCLUDED)

Illus. Part No. No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
PAINT, TOUCH-UP (1/2oz.)		OIL			SEAL	ER	
72017 4392899			350572	Oil, Gearcase (16 Oz.)		285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
PAINT, PRESSURIZED SPRAY		LUBRICANT		SHIPPING KIT			
(12 oz.)		LUBI				3348675	Shipping Kit
350938 350930 4392901			285208	Lubricant (Use Only in Brake Shoe Assembly On Roller and	ACCE	367031	Y PARTS Drain Protector
PAINT, BULK	(1 gt.)			Pin)		285320	Siphon Break Kit